

# Product Information Periphery module PM DI16





(valid from 06/2012)

# Changes to older versions of this document

Changed in Rev. 4: Changed in Rev. 5: Changed in Rev. 6: Changed in Rev. 7:

in-/ output delay times changed connectors, new design line input threshold voltage information for disposal of old equipment





# compact periphery module for 16 digital inputs 24V

- green diagnostic LED for each input
- insertion stripe with description field for every signal
- cage-clamp connector with bolt flanges on side

**Application with 2-wire switches** 


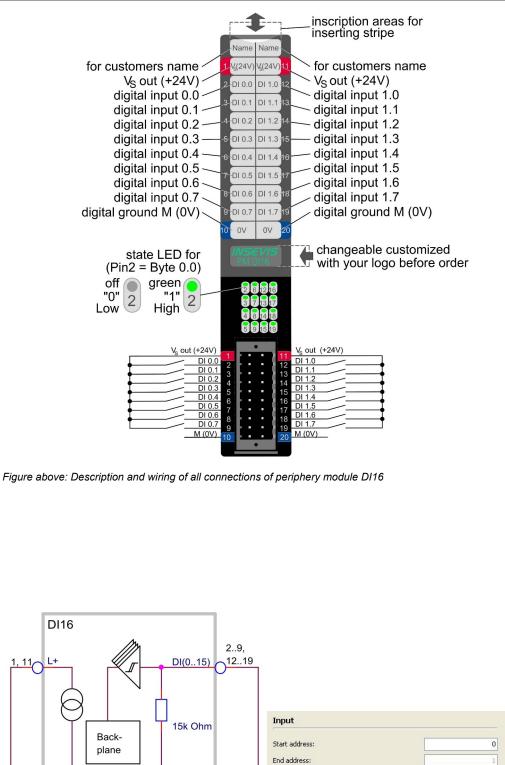




Figure above: Block diagram of DI16 for 2 wire swiches

Figure above: Configuration block of start-/ end addresses of DI16-inputs (in byte) in the ConfigStage



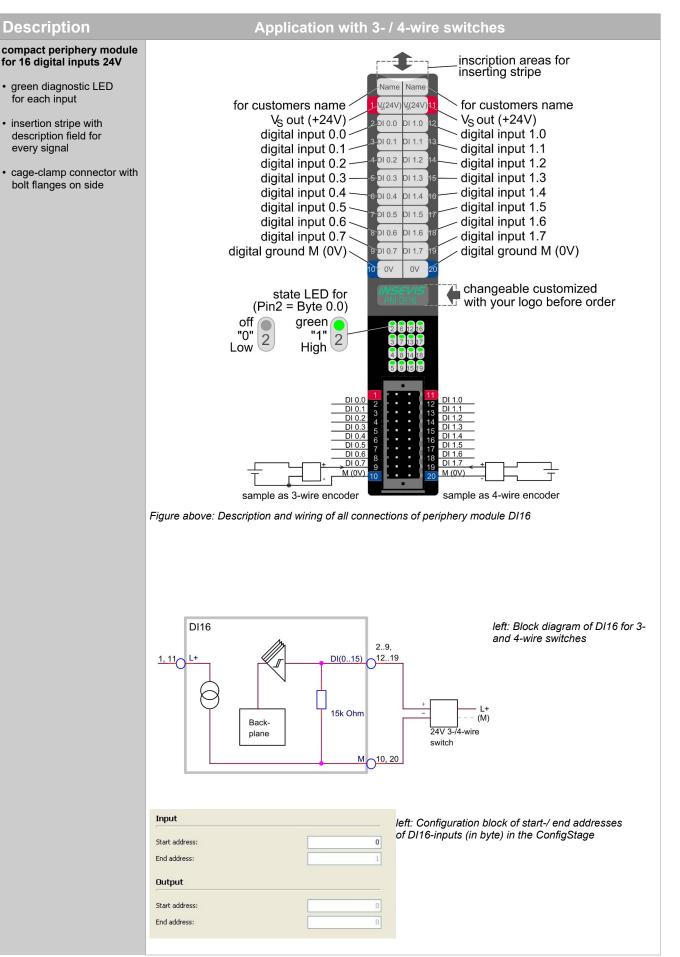



Techr		data
100111	110011	

lechnical data			
Dimensions W x H x D (mm) Weight	20 x 108 x 70 mm ca. 150 g		
Operating temperature range Storage temperature range Relative humidity	-20°C +60°C (without condensation) -30°C +80°C up to 96% (without condensation)		
Connection technology	connector with cage clamp technology for cross section up to max. 1,5mm <sup>2</sup>		
IP-protection class Vibrations	IP41 Frequency range 2 -100Hz, amplitude 1mm peak < 13,2Hz acceleration 0,7g >13,2Hz		
Sensor supply Load voltage L+	short circuit proof output, current limited to 30 mA (typ.) 24V DC (11V 30V DC, is connected by device supply)		
Wire length unshielded (max.) shielded (max.)	30 m 100 m		
Digital inputs Diagnostic LEDs	16 16, green		
Input voltage for signal 0 for signal 1	0V +5 V +10,5V +30 V		
Input current for signal 1	1 mA		
Broken wire detection Potential separation to PLC Access of 2-wire-BERO	no no no		
Switch on delay Switch off delay Sampling cycle time	off delay 1,4 ms (typ.)		

Ordering data module			
Identification	Order-no.	Packaging unit	
Periphery module DI16	PM-DI16-02	PU: 1 piece	
Connector 2x10pin with pin markings and bolt flanges on side	E-CONS20D-00	PU: 1 piece	

## Qualified personnel

All devices described in this manual may only be used, built up and operated together with this documentation. Installation, initiation and operation of these devices might only be done by instructed personnel with certified skills, who can prove their ability to install and initiate electrical and mechanical devices, systems and current circuits in a generally accepted and admitted standard.

# Manuals, sample programs

Additional documentation by manuals is available as well sample applications at the download area of www.insevis.com in English language for free download.

## Copyright

This and all other documentation and software, supplied or hosted on INISEVIS web sites to download are copyrighted. Any duplicating of these data in any way without express approval by INSEVIS GmbH is not permitted. All property and copy rights of theses documentation and software and every copy of it are reserved to INSEVIS GmbH.

## Trade Marks

INSEVIS refers that all trade marks of particular companies used in own documentation are reserved trade marks are property of the particular owners and are subjected to common protection of trade marks.

# Disclaimer

All technical details in this documentation were created by INSEVIS with highest diligence. Anyhow mistakes could not be excluded, so no responsibility is taken by INSEVIS for the complete correctness of this information. This documentation will reviewed regularly and necessary corrections will be done in next version. With publication of this data all other versions are no longer valid.

## Disposal

Do not throw old appliances in the household waste! In the interest of environmental protection, old appliances must be collected separately from unsorted municipal waste. You can find out more about the proper disposal / return of your old appliance at <u>www.insevis.com/disposal</u>. Attention: The deletion of personal data on the old devices to be disposed of is the responsibility of the end user.

With publication of this information all other versions are no longer valid.